



## Bird Guard

### USER'S GUIDE

Item # 3665BG

#### Contents

- Plastic ring
- 20 14-gauge, metal spikes [3.75" (9.5cm)]
- 1.75" (4.5cm) screw
- nut
- lock washer

#### Setup

1. Place the ring assembly on a flat surface such that the holes are facing up. (fig. 1).
2. Put a spike in each hole. Push until it cannot be inserted any further. To minimize the chance for injury, the spike should be inserted at a slight angle (fig. 2a) rather than straight down (fig. 2b).
3. Loosen the nut/washer on the ring assembly far enough so the ring can easily fit around the rim of the rain collector.
4. Wrap the ring around the rim of the rain collector. Leave a gap of about ¼" (½cm) from the top (fig. 3).
5. Hand tighten the screw.



Fig. 1: Ring Assembly

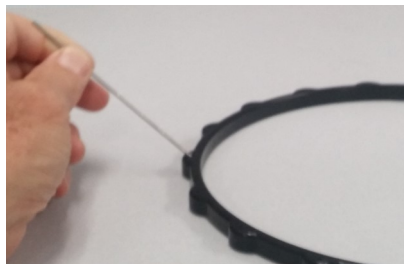


Fig. 2a: Correct Spike Insertion

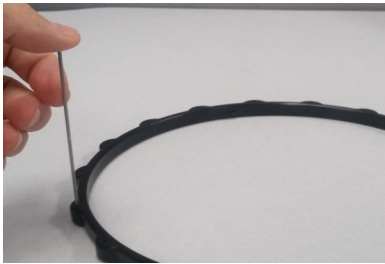


Fig. 2b: Incorrect Spike Insertion



Fig. 3: Ring Attached

**Spectrum<sup>®</sup>**  
**Technologies, Inc.**

3600 Thayer Court  
Aurora IL 60504  
(800) 248-8873 or (815) 436-4440  
Fax (815) 436-4460  
E-Mail: [info@specmeters.com](mailto:info@specmeters.com)  
[www.specmeters.com](http://www.specmeters.com)